

 
SH

'Click' to download complete Manual



MANUAL

0ZAR275//A1E

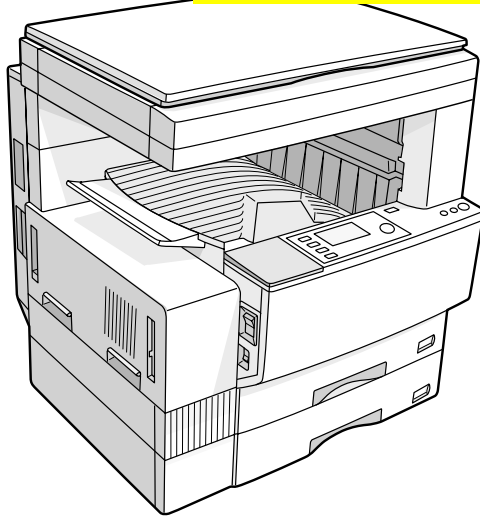

DIGITAL LASER COPIER/ PRINTER

AR-235 MODEL AR-275

CONTENTS

[1] NOTE FOR SERVICING	1-1
[2] SYSTEM CONFIGURATION	2-1
[3] SPECIFICATIONS	3-1
[4] CONSUMABLE PARTS	4-1
[5] UNPACKING AND INSTALLATION	5-1
[6] EXTERNAL VIEW AND INTERNAL STRUCTURE	6-1
[7] ADJUSTMENTS, SETTING	7-1
[8] SIMULATION	8-1
[9] TROUBLE CODE LIST	9-1
[10] DISASSEMBLY AND ASSEMBLY	10-1
[11] OTHERS	11-1

Parts marked with “△” are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used
for after sales service only.
The contents are subject to change without notice.

CAUTION

This product is a class 1 laser product that complies with 21CFR 1040.10 and 1040.11 of the CDRH standard and IEC825. This means that this machine does not produce hazardous laser radiation. The use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This laser radiation is not a danger to the skin, but when an exact focusing of the laser beam is achieved on the eye's retina, there is the danger of spot damage to the retina.

The following cautions must be observed to avoid exposure of the laser beam to your eyes at the time of servicing.

- 1) When a problem in the laser optical unit has occurred, the whole optical unit must be exchanged as a unit, not as individual parts.
- 2) Do not look into the machine with the main switch turned on after removing the developer unit, toner cartridge, and drum cartridge.
- 3) Do not look into the laser beam exposure slit of the laser optical unit with the connector connected when removing and installing the optical system.
- 4) The middle frame contains the safety interlock switch.
Do not defeat the safety interlock by inserting wedges or other items into the switch slot.

Warning!

This product is a class A product.

If it is operated in households, offices or similar surroundings, it can produce radio interferences at other appliances, so that the user has to take adequate countermeasures.

CLASS 1 LASER PRODUCT

LASER KLASSE 1

LUOKAN 1 LASERLAITE

KLASS 1 LASERAPPARAT

VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VARNING

OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

CAUTION

INVISIBLE LASER RADIATION,
WHEN OPEN AND INTERLOCKS DEFEATED. AVOID
EXPOSURE TO BEAM.

VORSICHT

UNSICHTBARE LASERSTRALUNG,
WENN ABDECKUNG GEÖFFNET UND
SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT
DEM STRAHL AUSSETZEN.

VARO !

 
 
 
AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET
ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE ÄLÄ
KATSO SÄTEESEEN.

ADVARSEL

USYNLIG LASERSTRÅLNING VED ÅBNING, NÅR
SIKKERHEDSBRYDERE ER UDE AF
FUNKTION. UDGÅ UDSÆTTELSE FOR
STRÅLNING.

VARNING !

OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR
ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRakta EJ
STRÅLEN. – STRÅLEN ÄR FARLIG.

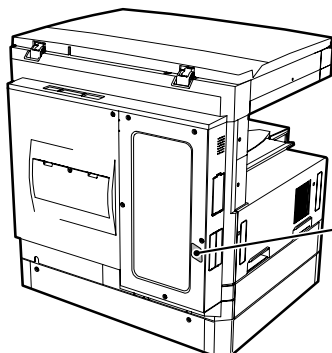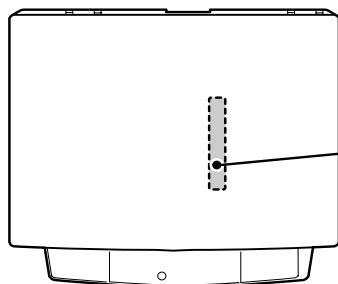

LASER WAVE – LENGTH : 795 ± 15 nm
Pulse times : 0.481 ms/6 mm
Out put power : 5 mW

Disconnect the AC cord before servicing the unit.

CONTENTS

[1] NOTE FOR SERVICING

- 1. Warning for servicing 1-1
- 2. Precautions for servicing 1-1
- 3. Note for installing site. 1-1

[2] SYSTEM CONFIGURATION

- 1. Structure 2-1
 - A. Hardware 2-1
- 2. System outline (Options) 2-2

[3] SPECIFICATIONS

- 1. Basic specifications 3-1
- 2. Operation specifications. 3-1
 - A. Common operation 3-1
 - B. Copy mode 3-1
- 3. Engine specifications 3-2
 - A. Operation and display section 3-2
 - B. Paper feed, transport, paper exit section 3-2
 - C. Optical (Image scanning) section 3-3
 - D. Scanner (exposure) section 3-3
 - E. Image process section 3-3
 - F. Fusing. 3-4
 - G. DRIVE. 3-4
- 4. Safety and environmental protection standards. 3-4
- 5. Environment conditions 3-4

[4] CONSUMABLE PARTS

- 1. List 4-1
 - A. SEC/LAG 4-1
 - B. SECL 4-2
 - C. Europe affiliates/East Europe/SEEG/SUK/SCA/
SCNZ/SEA/SEES/SEZ/SEIS/SEB/SEN/SEF/SMEF/
Russia/Middle East/Africa/CIS 4-3
 - D. Special country/Taiwan. 4-4
 - E. Asia affiliates /Asia agent/STCL/SRH/SRS/SRSSC/
SBI 4-5
- 2. Production number identification 4-6
- 3. Environment conditions 4-6
 - A. Ambient conditions for transporting 4-6
 - B. Ambient storage conditions (sealed) 4-6
 - C. Operating ambient conditions. 4-6
- 4. Life (packed conditions) 4-6

[5] UNPACKING AND INSTALLATION

- 1. Removal of protective material and fixing screw 5-1
- 2. Removal and storage of fixing pin 5-1
- 3. Developer cartridge installation 5-1
- 4. Toner cartridge installation 5-2
- 5. Toner concentration sensor level adjustment. 5-2
- 6. Paper size selection for paper feed tray 5-2

[6] EXTERNAL VIEW AND INTERNAL STRUCTURE

- 1. External view 6-1
- 2. Internal. 6-1

- 3. Operation panel 6-2
 - A. Key position 6-2
 - B. LCD panel 6-2
- 4. Motor, Solenoid, Clutch. 6-3
- 5. Sensor. 6-3
- 6. PWB unit 6-4
- 7. Section 6-4

[7] ADJUSTMENTS, SETTING

- 1. List of adjustment items 7-1
- 2. Copier adjustment. 7-1
 - A. Process section 7-1
 - B. Mechanism section 7-2
 - C. Image density (exposure) adjustment 7-9

[8] SIMULATION

- 1. Operating procedures and operations 8-1
 - A. Basic operation 8-1
 - B. Simulation kinds and valid key functions 8-1
 - C. Simulation operation and procedure basic pattern 8-2
- 2. Simulation code list 8-3
- 3. Details 8-5

[9] TROUBLE CODE LIST

- 1. List 9-1
- 2. Self diagnostics. 9-1

[10] DISASSEMBLY, ASSEMBLY AND MAINTENANCE

- 1. Maintenance table. 10-1
- 2. Counter clear 10-1
- 3. List of disassembly and assembly 10-1
- 4. Details 10-2
 - A. Process unit. 10-2
 - B. Developing section 10-3
 - C. Fusing section 10-4
 - D. Paper feed section. 10-6
 - E. Side door unit 10-10
 - F. 1st paper exit unit 10-10
 - G. Laser unit. 10-12
 - H. Power unit 10-13
 - I. PWB 10-13
 - J. Ozone filter 10-15

[11] OTHERS

- 1. Fiasin ROM version up procedure 11-1
 - A. Program download procedure
(Main body program, FAX program) 11-1
- 2. User programs 11-2
- 3. E-MAIL STATUS/E-MAIL ALERTS 11-3
 - A. Basic functions 11-3
 - B. Main body specifications 11-3
 - C. Printer controller specifications 11-3
 - D. Handling of transmission data 11-3